


COLUMN AND ANCHOR LAYOUT
 FIN FLR ELEV = 0-0
 BASE PLATES SHOWN AT X2 SCALE

A
 E1

INDICATES COLUMN SIZE (SEE PLAN)
 SEE PLAN FOR COLUMN ORIENTATION
 INDICATES BOTTOM OF BASE PL ELEV (SEE PLAN). IF BLANK, THEN COLUMN BEARS DIRECTLY ON SLAB
 INDICATES COLUMN ANCHOR BOLT SETTING DETAIL (SHOWN ON E10)

LEGEND

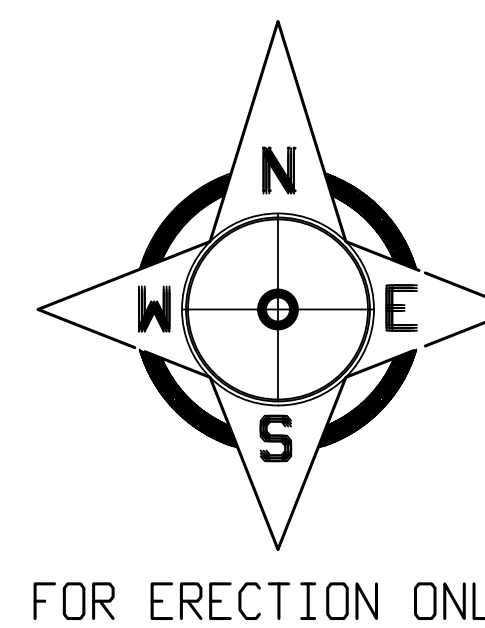

0	10-10-19	RELEASED FOR FIELD USE
A	8-14-19	ISSUE FOR APPROVAL
REV.	DATE	DESCRIPTION
SPECIALTY FABRICATION & WELDING, INC.		
680 Goodbar Ave. Umatilla, FL 32784		Office: 352-669-9353 Fax: 352-669-9354
JOB: ATLANTIC SELF STORAGE - (FLAGLER PARCEL 8)		
LOCATION: JACKSONVILLE, FL		
DRWG. COVERS: COLUMN ANCHOR LAYOUT		
DETAILER PALMETTO STRUCTURAL DETAILING, LLC		JOB #
CHECKER MILLER	DATE	19-56
PROJECT MANAGER MICHAEL PURVIS		DRWG. # E1